



VSD PUMP VEGA VSP SERIES



PRODUCT *Catalogue*

FEATURES & BENEFITS

Easy to operate

Low noise level

**Automatic start/stop function Pre-wired with a 3-point plug
Energy-efficient**

**Up to 80% more energy savings compared to traditional pump
systems**

Restart delay

**An integral time delay for restart after 3 seconds protects the
motor from heat build-up due to continuous on/off switching**

Auto-rotation

**A built-in timer will automatically start the pump within a pre-
selected cycle to rotate the bearings**


Constant pressure

**A pressure transducer ensures that constant pressure is
maintained even when multiple water outlets are used
simultaneously**


Class leading efficiency

The unit has the following integrated functions for protection from:

- **Dry run**
- **Over-current**
- **Over/under voltage**
- **Overload**
- **Abnormal Pressure**

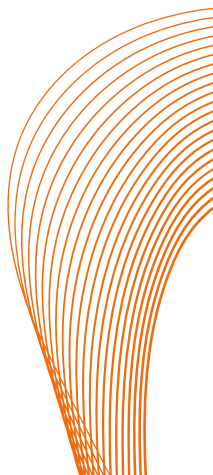

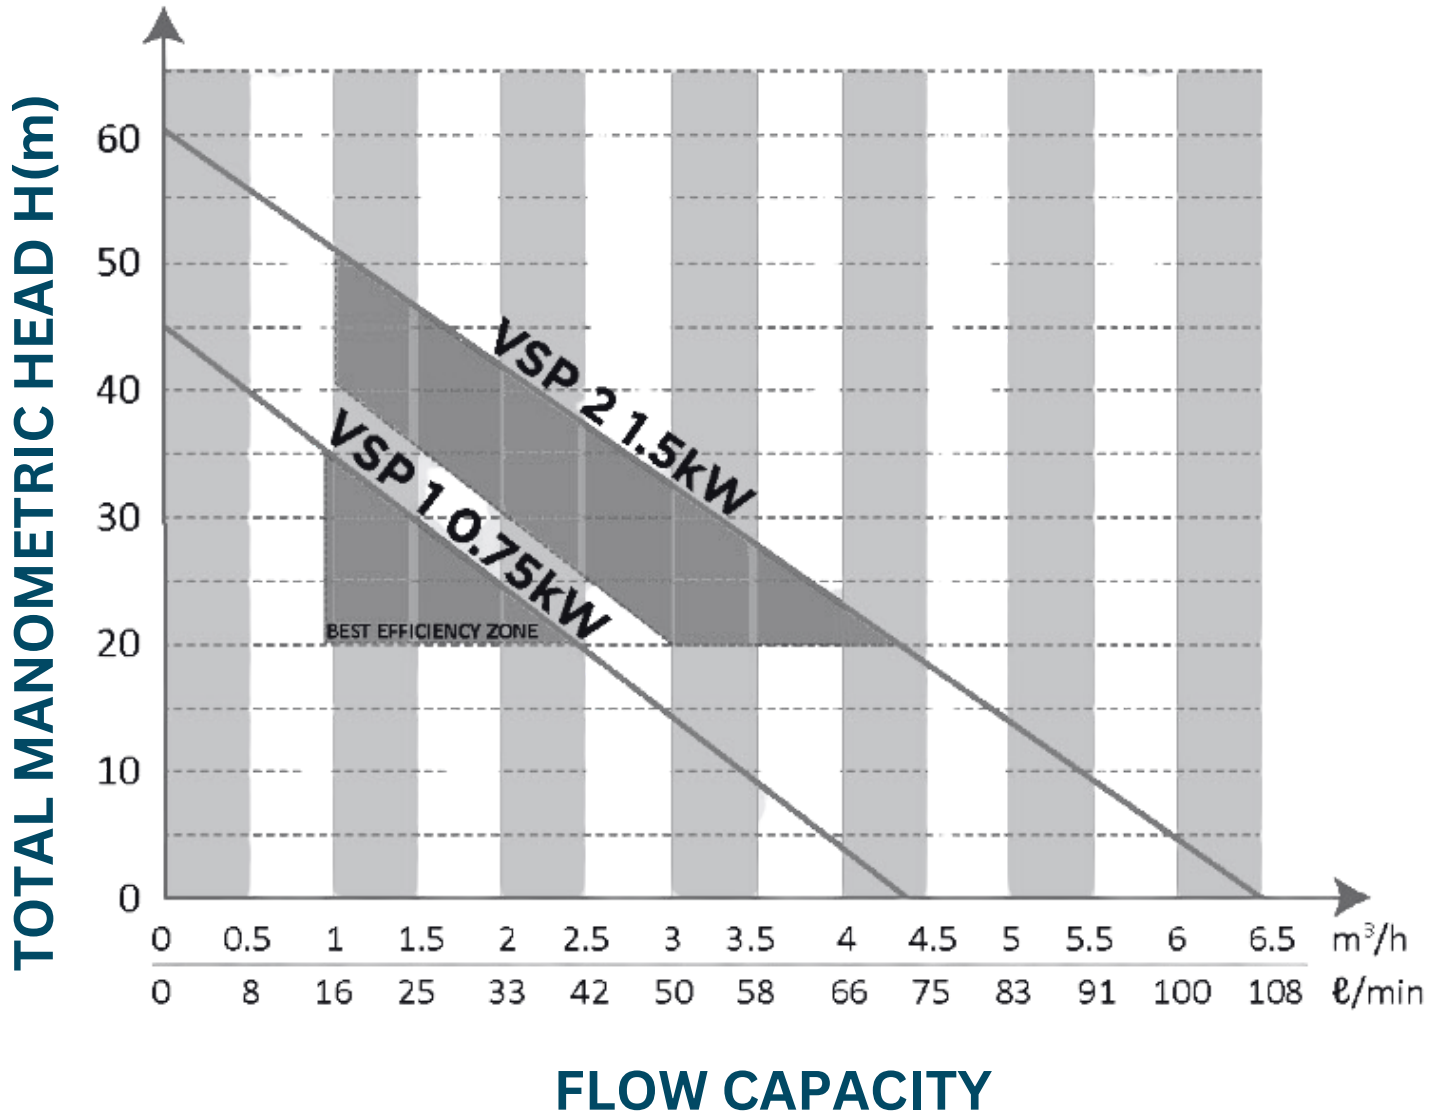

PUMP PERFORMANCE CURVE



PUMP SPECIFICATIONS

	VSP1	VSP2		VSP1	VSP2
Pump Model	VSP1	VSP2	Max. Pressure	4.5 Bar	6 Bar
Motor Power	0.75 kW	1.5 kW	Max. Fluid Temperature	80 °C	80 °C
Max. Flow	66 lt/min	108 lt/min	Max. Ambient Temperature	40 °C	40 °C

-  Variable Speed drive (VSD) defined:
The speed at which the pump rotates varies as per the pressure requirement to ensure minimal energy is being used.
-  Unit intended for clean water usage, such as drinking water, or non-potable water piping system, and for irrigation purposes.
- Unit suitable for use with water temperatures ranging from 2 to 80 degrees celsius.

IMPORTANT INFORMATION

The pump must be earthed.

All the maintenance should be carried out with the power supply disconnected.

Do not put any strain on the electrical cable.

The pump is designed for water containing no solid particles.

Do not adjust any settings without having carefully read and understanding the instructions.

Extending the cable may affect your factory warranty. Make use of an approved extending plug adapter.

The pump should be installed in a ventilated, undercover area to protect the unit against direct sunlight, rain and spray from an irrigation system. (JoJo pump cover recommended)

Pumping muddy water or water containing suspended solids will severely reduce the life expectancy of the unit. Note that this type of application falls outside of the factory warranty.

The booster pump is equipped with a draining screw at the bottom of the suction/discharge casing. It is advised to drain the unit when temperatures fall below 0°C.


OPERATING INSTRUCTIONS

1.Ensure that the power supply cable is connected correctly.

2.The suction and discharge piping should be able to withstand pressure of up to 6 bar, be air tight on the suction side and water tight on the discharge side.

	Recommended suction pipes:	Recommended discharge pipe:
0.75kW	HDPE (minimum 1" or 25mm) Helical coil reinforced flexible hose 1" or 25mm	Copper, HDPE or any SABS approved piping (minimum 3/4 " or 22mm)
1.5kW	HDPE (minimum 1 ^{1/2} " or 40mm class 6) Helical coil reinforced flexible hose 1 ^{1/2} " or 40mm	HDPE (minimum 1 ^{1/2} " or 40mm class 6)

3.Follow the priming instructions as per diagrams.

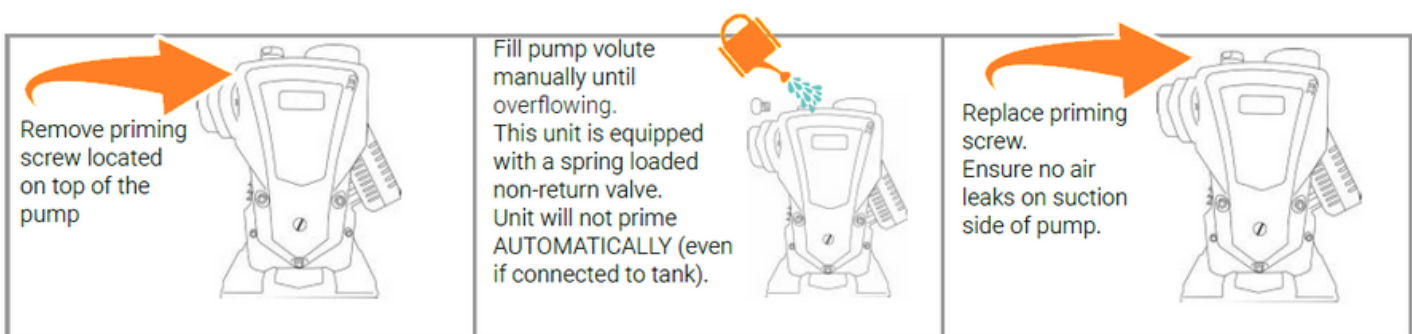


4. The booster pump is designed to operate with a 230V single-phase power supply. Voltage variance is maximum 10% up or down

SETTINGS

NOTE:

PLEASE REFRAIN FROM ALTERING THE DEFAULT SETTINGS, AS THEY ALLOW THE UNIT TO EFFECTIVELY RESPOND TO POTENTIALLY HARMFUL SYSTEM CONDITIONS. THIS BOOSTER PUMP SYSTEM CAN OPERATE SAFELY FOR 1 TO 2 MINUTES AFTER DRY RUN CONDITIONS ARE DETECTED.

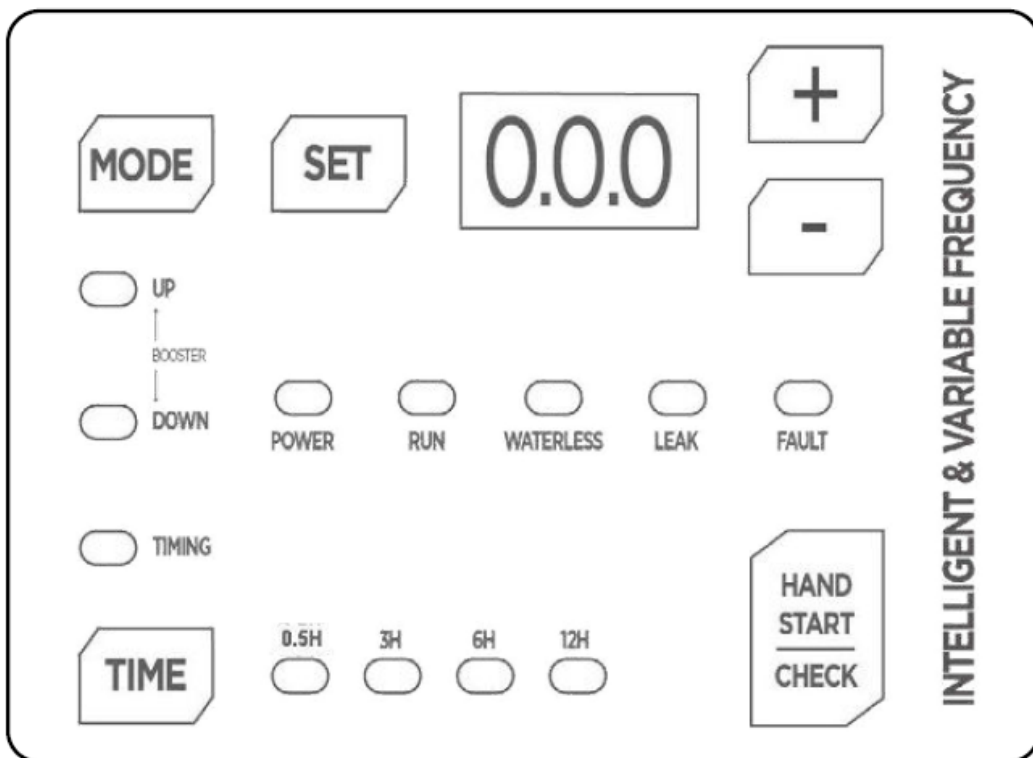

1. Press **MODE** button until you reach the desired category.


Mode UP.

must always be selected for installations where the pump is installed on ground level and supplying press parallel to or vertically up into a system.

- The screen will display the working pressure (bar).
- Pressing **+** will increase the set pressure.
- Pressing **-** will reduce the set pressure.
- The new set point will flash five (5) times before saving the value.
- The recommended operating range is between 2 bar and 3.5 bar. Do not exceed 4 bar for

residential

use

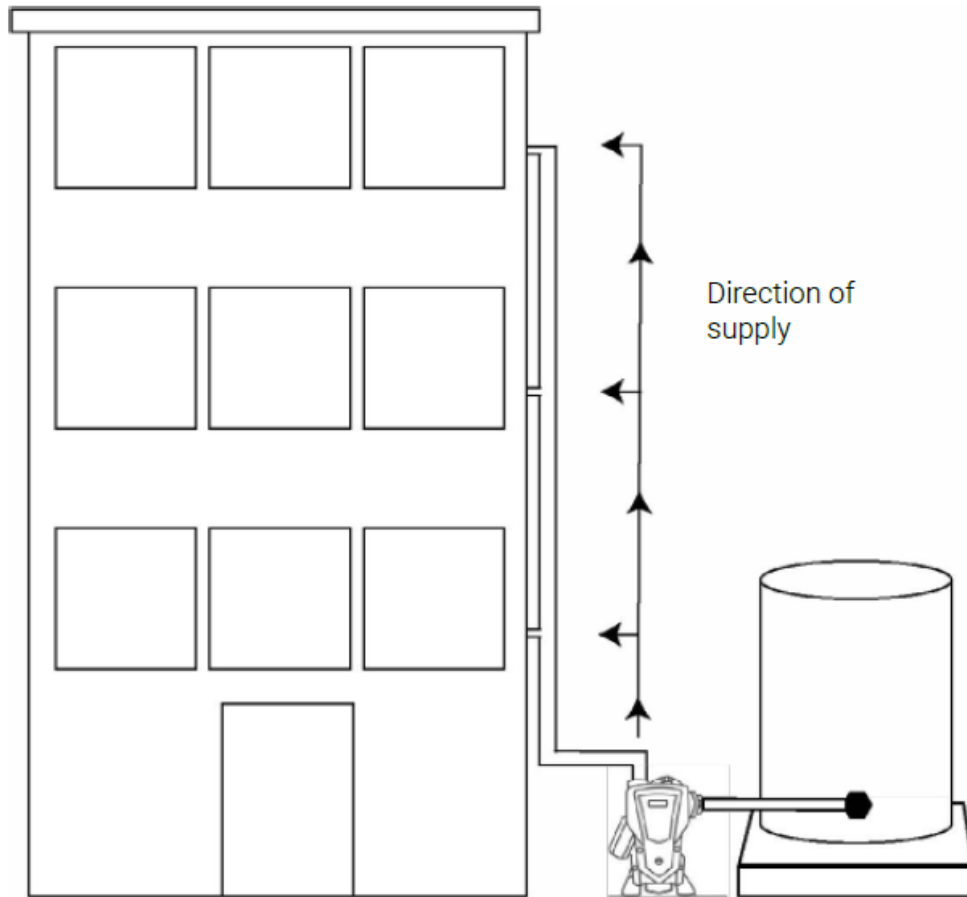

2. Press **SET** for skipping between functions "B01" to "B05".

2.1 B01: START UP PRESSURE

- When "B01" is displayed and "SET" is pressed, the start-up pressure can be adjusted as a percentage of the working pressure. The default ratio is set at 70%. **+** or **-** will increase or decrease this ratio.

For example, working pressure set at 3.0 bar and ratio set at 70%:

$$3.0 \text{ bar} \times 0.7 = 2.1 \text{ bar}$$

Once water usage has stopped, the pump will allow system pressure to drop to 2.1 bar before start up.

2.2. B02: DIRECTION OF ROTATION

- Must **ALWAYS** be set to "00", this will ensure the correct direction of rotation.

2.3. B03: DRY RUN PROTECTION

- When "B03" is displayed and "SET" is pressed, the screen will display a value between **0** and **1.5** bar. The default is set at 0.15 bar and is the pressure at which the pump will switch off in the case of running dry or against low back pressure as in the event of a burst discharge pipe. **+** or **-** will increase or decrease this value.

2.4. B04 and B05:

"180" Dry run - DO NOT CHANGE THIS SETTING

3. Indicator lights and fault codes:

3.1. Mode " UP":


- The " POWER" light will be illuminated.
- The " RUN" light will illuminate when the pump is operating.
- The " RUN" light will flash when the pump is operating but unable to reach the set pressure.
This is not unusual, as the application for household supply and irrigation supply vary vastly in flow demand.
- The " LEAK" light will illuminate in cases of a pressure leak in the line.
- Error codes will appear on the screen and are as follows:
 - **E01**: Low voltage from supply (below 130V).
 - **E02**: High voltage from supply (above 280V).
 - **E03**: Pressure transducer disconnected / faulty
 - **E04**: Motor temperature exceeding operating limits. Check for insufficient ventilation.
 - **E05**: Not in use.
 - **E06**: Not in use.
 - **E07**: Not in use.
 - **E08**: Locked rotor.
 - **E09**: Variable speed drive PC board fault condition.
 - **E10**: Not in use.
 - **E11**: Not in use.
- Pressing the "**MANUAL/AUTO**" (HAND START/CHECK) button will reset all fault codes. Press again to resume automatic operation.
- Operating under the " UP" mode will disable the " TIMING" light and function.

3.2. Mode TIME:

- TIME retains all settings of " UP" mode, but allows for the selection of a restart time. For example; "3H" will start the pump every 3 hours without the system demanding an automatic start. This function is important for applications where the unit may not be required to operate for extended periods of time (holiday home, weekend retreat, etc.)
- Daily starts keep the rotating equipment in good condition and prevents damage to bearings.

3.2. MODE DOWN:

Must **ONLY** be selected for installations where the pump is installed on the upper level and supplying pressure parallel or vertically down into a system. Selecting this option will reduce the overall pressure delivered by the pump to protect against over pressurizing lower lying systems

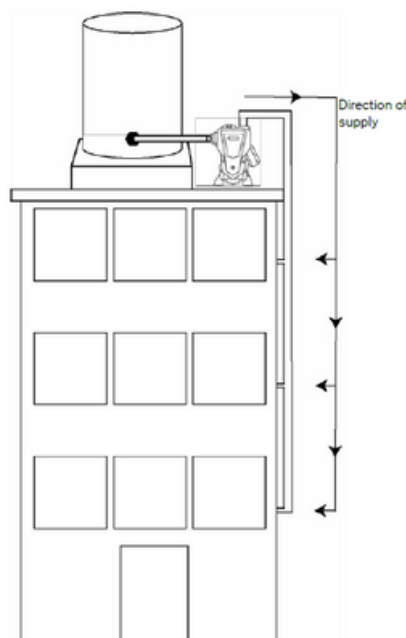



The
WATER & SOLAR COMPANY
WATER & ENERGY SYSTEMS



+27 62 375 5088



+27 65 321 5803



<https://www.thewatersolarcompany.co.za/>



<https://maps.app.goo.gl/MBR2LMW3T6f9TtHV9>



<https://www.facebook.com/watersolarcompany>



<https://www.youtube.com/@TheWaterSolarCompany/>



<https://www.instagram.com/watersolarcompany2023/>