




# Product Catalogue

## HMS Intelligent Pump

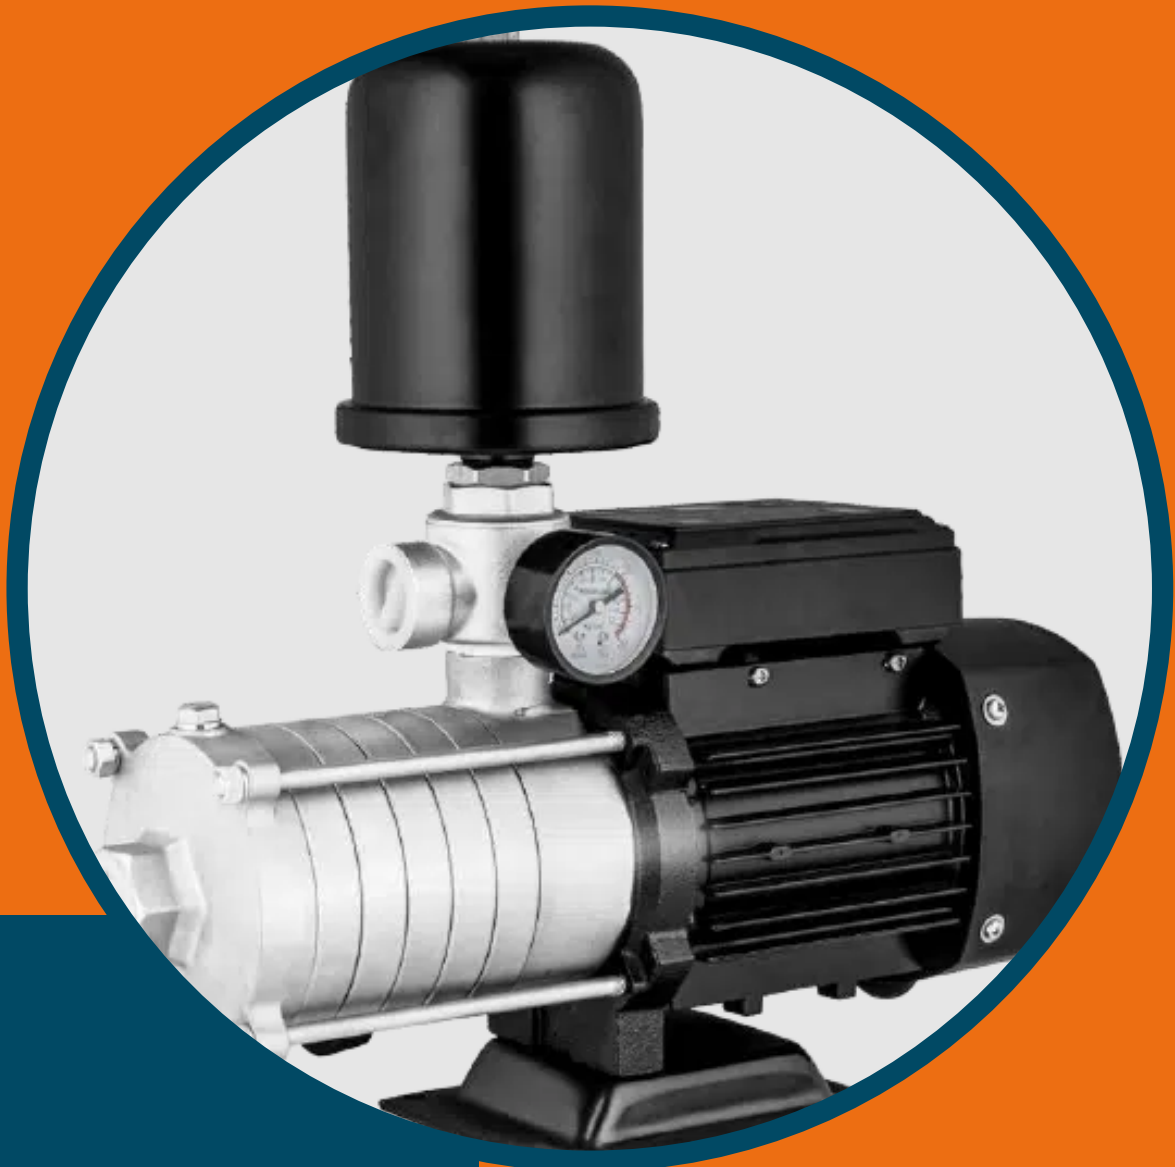

# FEATURES & BENEFITS

Easy to operate

Low noise level

Automatic start/stop function

Pre-wired with a 3-point plug

Energy-efficient

Up to 80% more energy savings compared to traditional pump systems

Restart delay

An integral time delay for restart after 3 seconds protects the motor from heat build-up due to continuous on/off switching

Auto-rotation

A built-in timer will automatically start the pump within a pre-selected cycle to rotate the pump within a pre-selected cycle to rotate the bearings

Constant pressure

A pressure transducer ensures that constant pressure is maintained even when multiple water outlets are used simultaneously

Class leading efficiency

The unit has the following integrated functions for protection from:

Dry run


Over-current

Over/under voltage

Overload

Abnormal Pressure

## PUMP PERFORMANCE CURVE

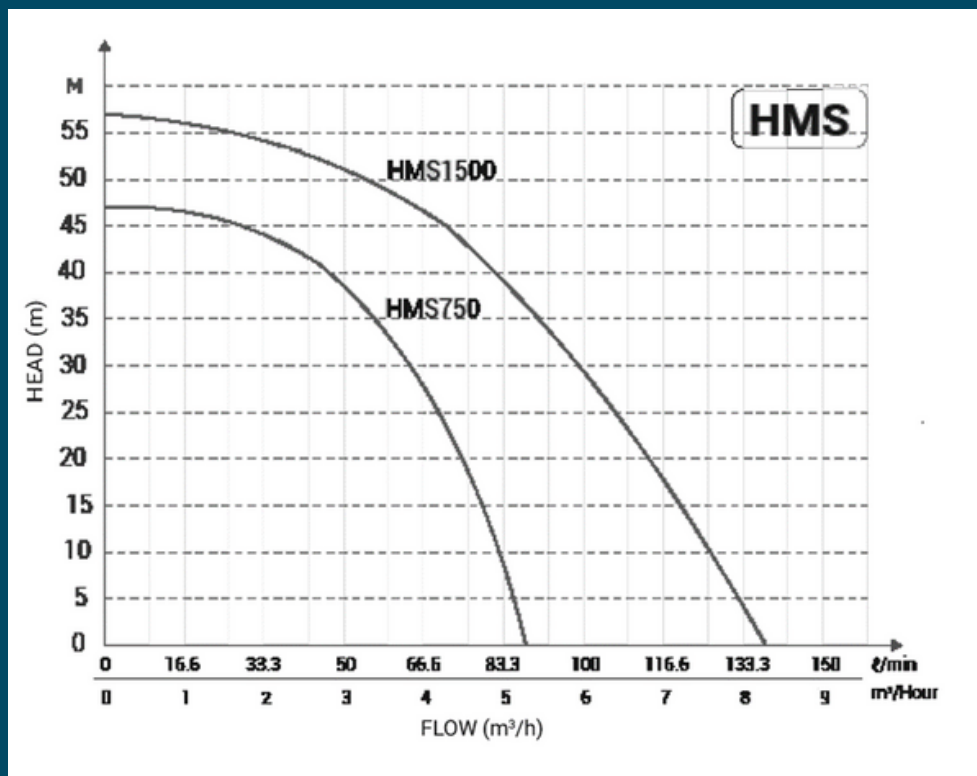

MODEL	FLOW	L/MIN	0	16.6	33.3	50	66.6	83.3	100	116.6	133.3	150
		m³/HOUR	0	1	2	3	4	5	6	7	8	9
HMS750	HEAD		47	46	44	38	27	7				
HMS1500			57	56	54	51	47	38	28	17	4	

# PUMP SPECIFICATIONS

	HMS750	HMS1500		HMS750	HMS1500
Pump Model	HMS750	HMS1500	Max. Pressure	4.7 Bar	5.7 Bar
Motor Power	0.75 kW	1.5 kW	Max. Fluid Temperature	80 °C	80 °C
Max. Flow	83.3 lt/min	133.3 lt/min	Max. Ambient Temperature	40 °C	40 °C
Hydraulic Components	304ST/ST	304ST/ST	Motor	Aluminium	Aluminium



• Variable Speed drive (VSD) defined:

The speed at which the pump rotates varies as per the pressure requirement to ensure minimal energy is being used.



• Unit intended for clean water usage, such as drinking water, or potable water piping system, and for irrigation purposes.

• Unit suitable for use with water temperatures ranging from 2 to 80 degrees celsius.

## IMPORTANT INFORMATION


- The pump must be earthed.
- All the maintenance should be carried out with the power supply disconnected.
- Do not put any strain on the electrical cable.
- The pump is designed for water containing no solid particles.
- Do not adjust any settings without having carefully read and understanding the instructions.
- Extending the cable may affect your factory warranty. Make use of an approved extending plug adapter.
- The pump should be installed in a ventilated, undercover area to protect the unit against direct sunlight, rain and spray from an irrigation system. (JoJo pump cover recommended)
- Pumping muddy water or water containing suspended solids will severely reduce the life expectancy of the unit. Note that this type of application falls outside of the factory warranty.
- The booster pump is equipped with a draining screw at the bottom of the suction/discharge casing. It is advised to drain the unit when temperatures fall below 0°C.

# OPERATING INSTRUCTIONS

1. Ensure that the power supply cable is connected correctly.
2. The suction and discharge piping should be able to withstand pressure of up to 6 bar, be air tight on the suction side and water tight on the discharge side.

Recommended types of suction piping	Recommended types of discharge piping
HDPE - minimum 1" class 6	HDPE - minimum 1" class 6
Helical Coil reinforced flexible hose 1"	
JoJo pump to tank connector kit	

3. Follow the priming instructions as per

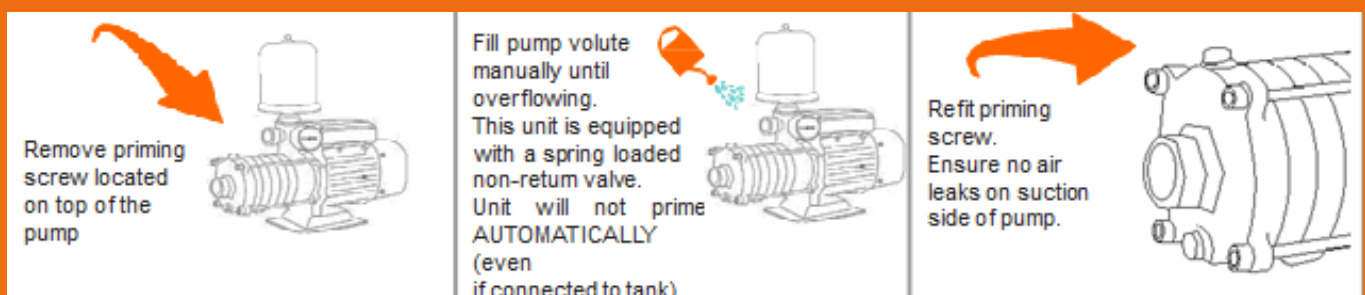


4. The booster pump is designed to operate with a 230V single-phase power supply. Voltage variance is maximum 10% up or down.

# SETTINGS

## NOTE:

IT IS NOT RECOMMENDED TO CHANGE THE DEFAULT SETTINGS AS IT ENABLES THE UNIT TO OPTIMALLY RESPOND TO POTENTIALLY HARMFUL SYSTEM CONDITIONS. THIS BOOSTER PUMP SYSTEM MAY OPERATE SAFELY FOR 1 TO 2 MINUTES AFTER DRY RUN CONDITIONS ARE LOGGED.

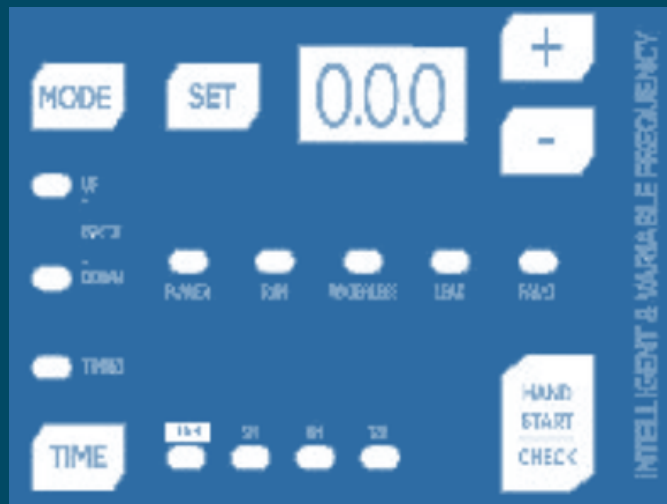


1. Press MODE button until you reach the desired category

MODE  UP:

must always be selected for installations where the pump is installed on ground level and supplying pressure parallel to or vertically up into a system.

- The screen will display the working pressure (bar).
- Pressing + will increase the set pressure.
- Pressing - will reduce the set pressure.
- The new set point will flash five (5) times before saving the value.
- The recommended operating range is between 2 bar and 3.5 bar. Do not exceed 4 bar for residential use

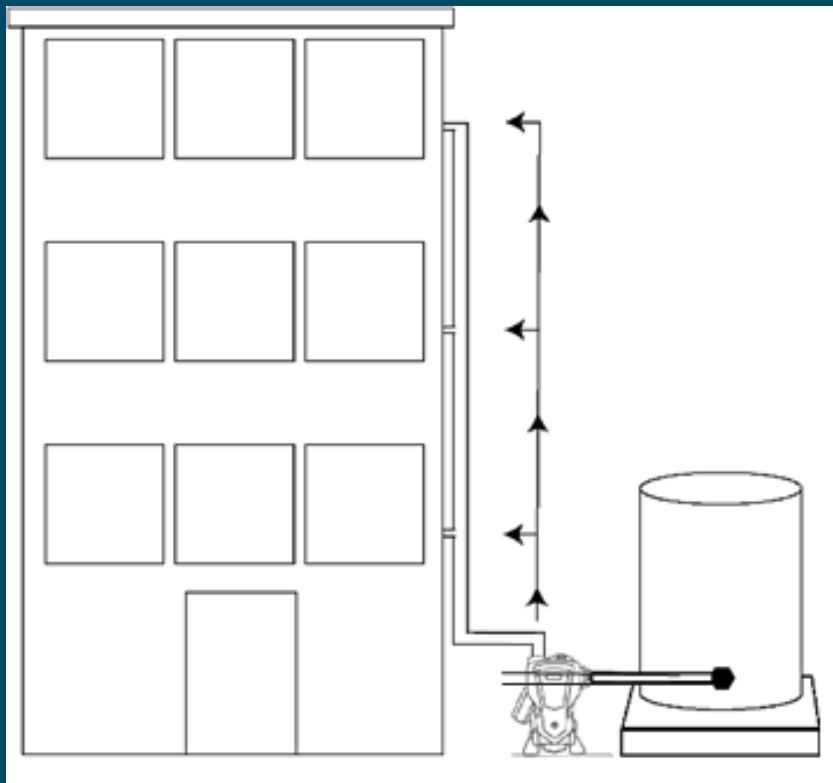

## 2. Press SET for skipping between functions “B01” to “B05”.

### 2.1 B01: START UP PRESSURE

- When “B01” is displayed and “SET” is pressed, the start-up pressure can be adjusted as a percentage of the working pressure. The default ratio is set at 70%. + or - will increase or decrease this ratio.

For example, working pressure set at 3.0 bar and ratio set at 70%:

$$3.0 \text{ bar} \times 0.7 = 2.1 \text{ bar}$$

Once water usage has stopped, the pump will allow system pressure to drop to 2.1 bar before start up.

### 2.2. B02: DIRECTION OF ROTATION

- Must ALWAYS be set to “00”, this will ensure the correct direction of rotation.

### 2.3. B03: DRY RUN PROTECTION

- When “B03” is displayed and “SET” is pressed, the screen will display a value between 0 and 1.5 bar.

The default is set at 0.15 bar and is the pressure at which the pump will switch off in the case of running dry or against low back pressure as in the event of a burst discharge pipe. + or - will increase or decrease this value.

### 2.4. B04 and B05:

- “180” Dry run - DO NOT CHANGE THIS SETTING

### 3. Indicator lights and fault codes:

#### 3.1 MODE UP:


- The  POWER light will be illuminated.
- The  RUN light will illuminate when the pump is operating.
- The  RUN light will flash when the pump is operating but unable to reach the set pressure

This is not unusual, as the application for household supply and irrigation supply vary vastly in flow demand.

- The  LEAK light will illuminate in cases of a pressure leak in the line.
- Error codes will appear on the screen and are as follows:
  - .. E01: Low voltage from supply (below 130V).
  - .. E02: High voltage from supply (above 280V).
  - .. E03: Pressure transducer disconnected / faulty
  - .. E04: Motor temperature exceeding operating limits.  
Check for insufficient ventilation.
  - .. E05: Not in use.
  - .. E06: Not in use.
  - .. E07: Not in use.
  - .. E08: Locked rotor.
  - .. E09: Variable speed drive PC board fault condition.
  - .. E10: Not in use.
  - .. E11: Not in use.

Pressing the “MANUAL/AUTO” (HAND START/CHECK) button will reset all fault codes. Press again to resume automatic operation.

Operating under the  “UP” mode will disable the  “TIMING” light and function.

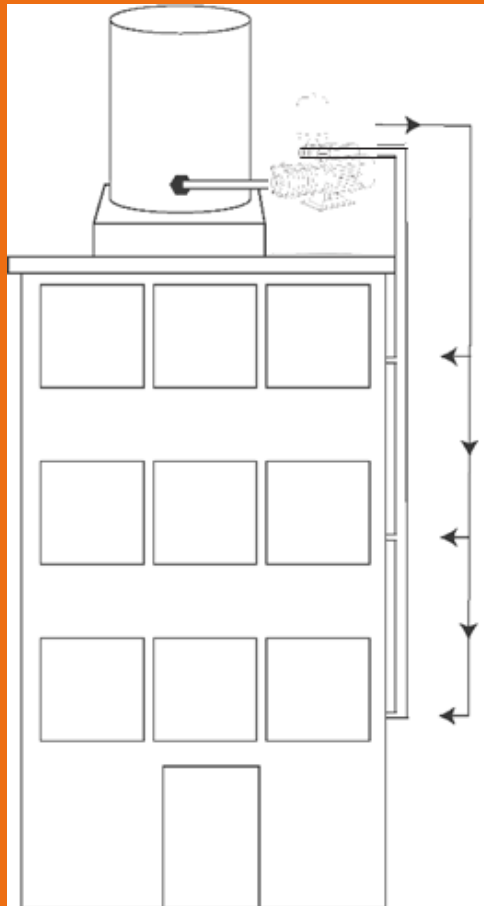

### 3.2. Mode TIME

- TIME retains all settings of  “UP” mode, but allows for the selection of a restart time.
- For example; “3H” will start the pump every 3 hours without the system demanding an automatic start. This function is important for applications where the unit may not be required to operate for extended periods of time (holiday home, weekend retreat, etc.)
- Daily starts keep the rotating equipment in good condition and prevents damage to bearings.

### 3.2. MODE DOWN:

Must ONLY be selected for installations where the pump is installed on the upper level and supplying pressure parallel or vertically down into a system. Selecting this option will reduce the overall pressure delivered by the pump to protect against over pressurizing lower lying systems





**+27 62 375 5088**

**+27 65 321 5803**

**[thewatersolarcompany.co.za](http://thewatersolarcompany.co.za)**